

350: Instructor Workstation Instructions


Hardware List:

Qty.	Item
4	1/4"-20 x 2 1/4" Hex Head Bolts
4	1/4" Flat Washers
6	1/4"-20 x 2 1/4" Carriage Bolts
10	1/4"-20 Hex Nuts
16	#6 Screws (1 1/2")
12	#6 Screws (1 1/4")
1	Round Grommet (2 1/2")

Step 1:

Attach Steel Frame to Drawer Cabinet using 2 - 1/4"-20 x 2 1/4" hex bolts, 2 - 1/4" flat washers, and 2 - 1/4"-20 hex nuts.


Note: Welds should be down on steel frame.

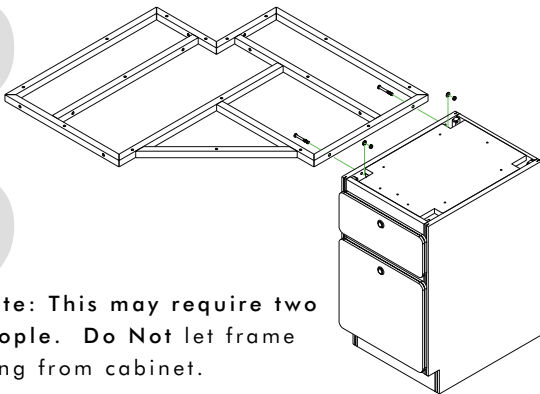

Note: This may require two people. Do Not let frame hang from cabinet.

Step 3:

Attach Leg to Steel Frame using 2 - 1/4"-20 x 2 1/4" Carriage bolts, and 2 - 1/4"-20 hex nuts.

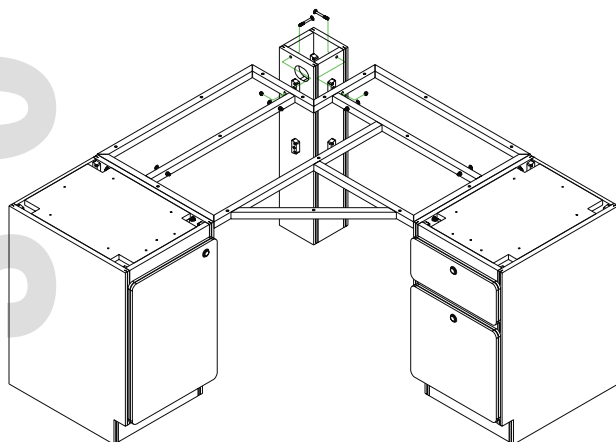


Thank you for purchasing your DEPCO Technology Lab Furniture! If you need further assistance, please call 1-800-767-1062.

Step 2:

Attach Steel Frame to Door Cabinet using 2 - 1/4"-20 x 2 1/4" hex bolts, 2 - 1/4" flat washers, and 2 - 1/4"-20 hex nuts.


Tighten all bolts securely.

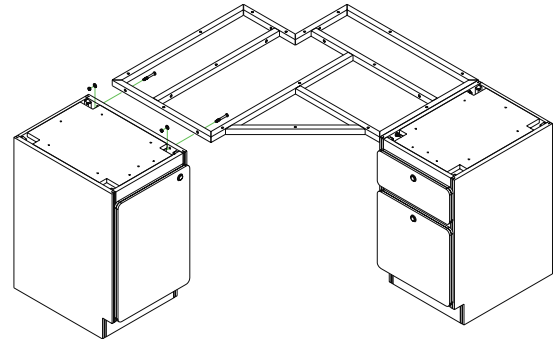

Step 4:

Attach Privacy Panels to Steel Frame using 4 - 1/4"-20 x 2 1/4" Carriage bolts, and 4 - 1/4"-20 hex nuts.

Then attach using the assembly fittings on the cabinets and leg.

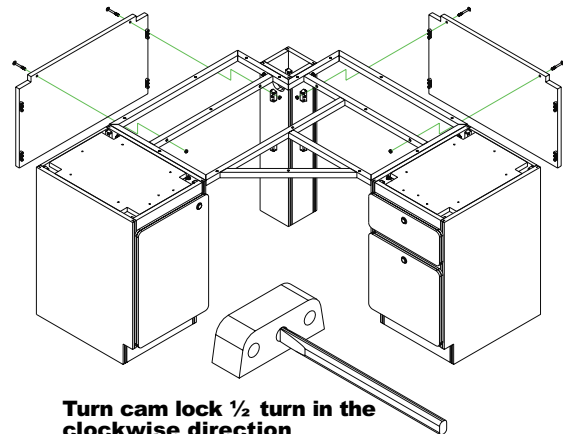

Turn cam lock 1/2 turn in the clockwise direction

350: Instructor Workstation Instructions

Step 5:

Attach the Frame to the Top using 16 - 1½" Screws.

Attach the Cabinets to the Top using 12 - 1¼" Screws

Note: DO NOT over tighten screws or they will strip out.

IT IS VERY IMPORTANT THAT YOU USE THE SHORT SCREWS THROUGH THE CABINET TOPS!!

Insert Round Grommet into hole in Top.

